



Note: Nondetented Boom shown (20,22)

No.	Description	Part No.
1	Adjustable Strap	10370G-03
2	Spring Assembly	10117G-97
3	Dome, Right	15522P-08
4	Switch Cap Kit	41090G-13
5	Switch Guard	13148P-01
6	Push Button Switch	09851P-17
7	Filter	11410P-02
8	Earphone Assembly	10376G-17
9	Screw (10/pk)	00023M-11
10	Filter	25629P-05
11	Undercut Gel Earseal (pair)	40863G-02
12	PCB Assembly	18289G-13

No.	Description	Part No.
13	Overhead Cord Kit	22607G-11
14	Nut and Washer Kit (10 pk)	12052G-02
15	Communication Cord Assy Kit	18028G-34
16	M-7A Electret Mic	09168P-33
17	Mic Protector w/ O-Ring	40062G-02
18	Kit, Dome & Mic Boom	40688G-71
19	Left Dome (Detented Boom)	15522P-46
20	Left Dome (Nondetented Boom)	15522P-61
21	Boom Guide Kit (Detented)	12840G-09
22	Boom Guide Kit (Nondetented)	12840G-20
23	Hybrid Boom with Cord	18740G-05

ELECTRICAL SCHEMATIC
MODEL H3442

